


A/C Filter

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

28.A/C Filter


A: REPLACEMENT

- 1) Remove the instrument panel lower cover. <Ref. to EI-39, REMOVAL, Glove Box.>
- 2) Remove the 2 clips and the damper (string).

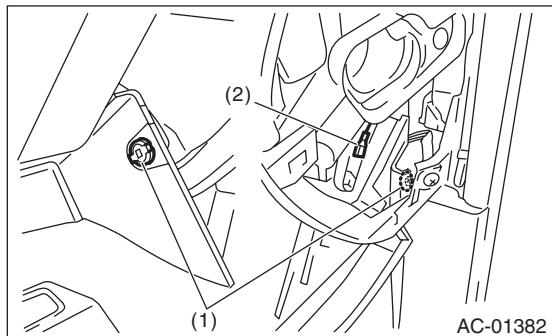


(1) Clip
(2) Damper (String)

- 3) Remove the glove box.
- 4) Remove the service hole cover.

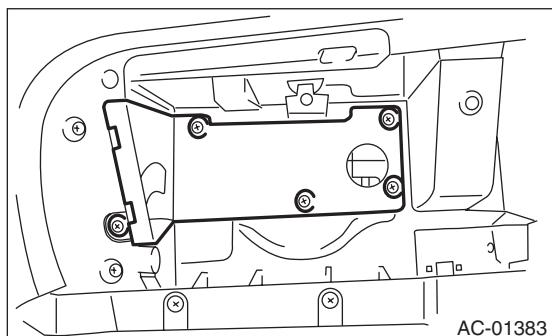

- 5) Remove the A/C filter.

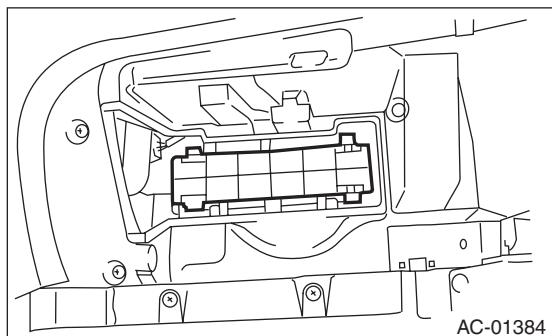

- 6) Install in the reverse order of removal.